
TRILOGY

INSTALLATION GUIDE

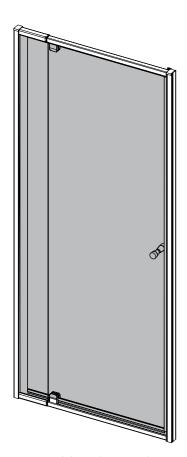


INLINE CONFIGURATION

Fully assembled Ready to install

Pg 1 - 7


AZS305001-140/E

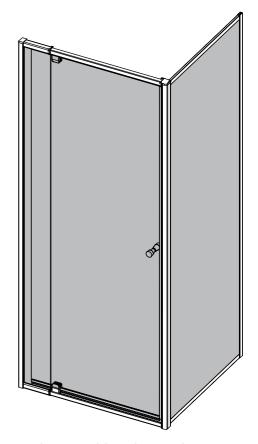


L SHAPED CONFIGURATION

Fully assembled front Ready to install


Pg 8 - 14

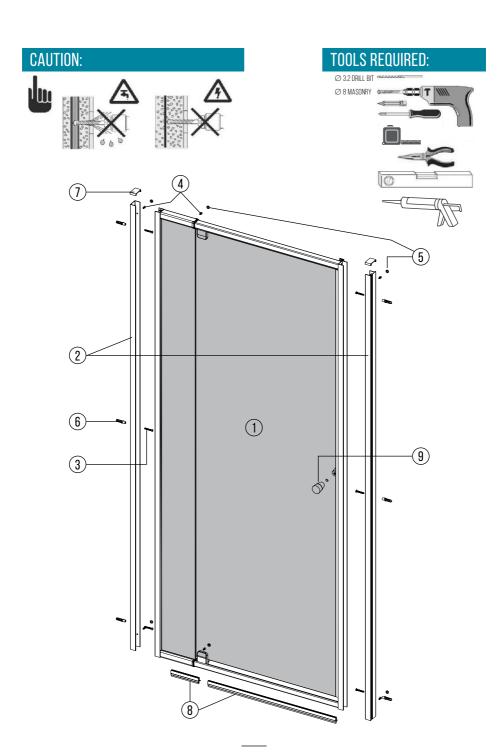


ITEM	DESCRIPTION	QTY.
1		1
2		1
3	€ ST4X35	7
4	Door ST4X10 OR 3.2X7MM	7
5		7
6	Ø8	7
7		2
8		2
9		1

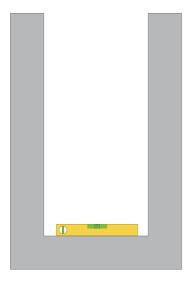



Check floor for level

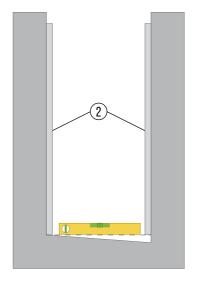


If uneven, fit wall channels level to the highest side

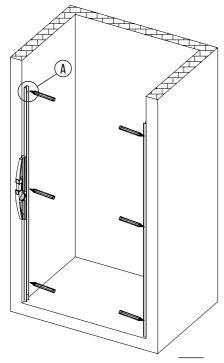


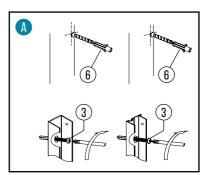


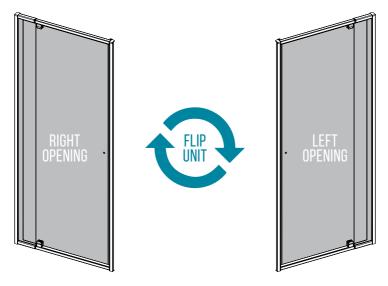


Simply flip the showerscreen to achieve left or right opening **Note:** Door must open outward

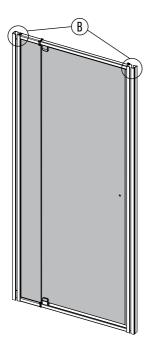


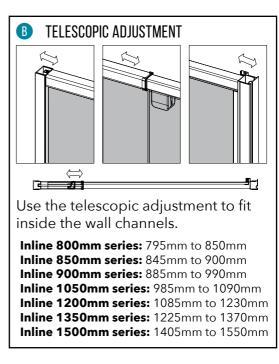


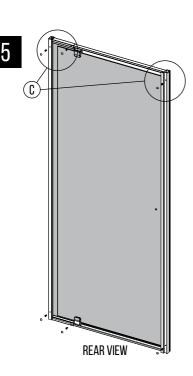

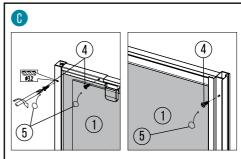



- Screw or rivet shower screen to wall channels
- Screw or rivet to lock telescopic function (Top & bottom)

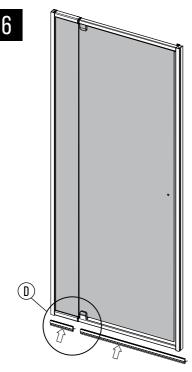

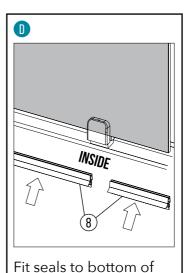



door ensuring angled flap faces inside

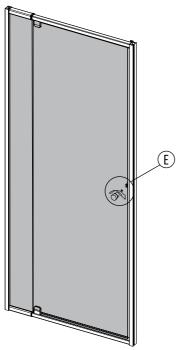


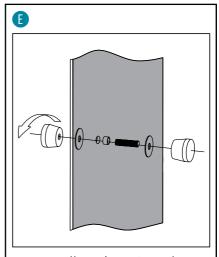

Ensure all gaskets & seals are fitted against glass surface

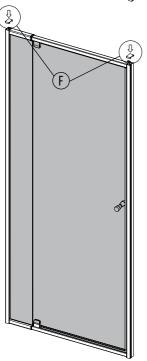


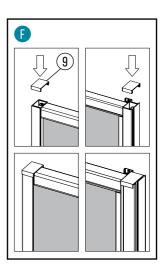


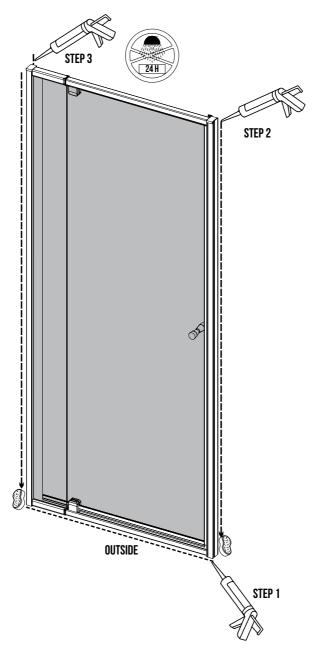


Ensure clean & dry surfaces before silicone application Avoid usage of solvents during application

Note: Do not apply a silicone seal to the inside bottom gap between bottom sill and floor/tray

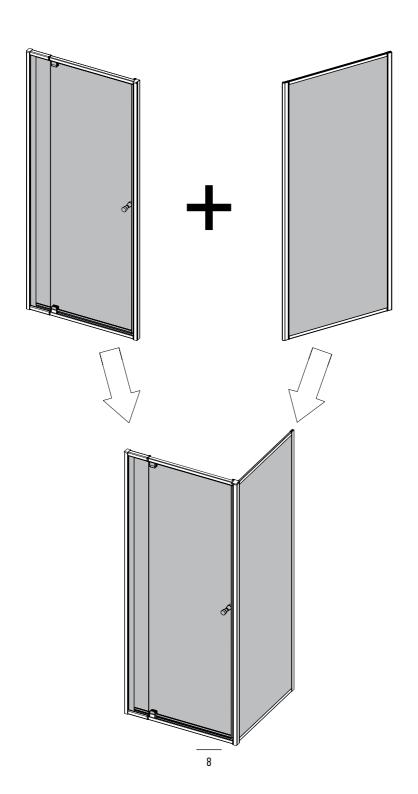


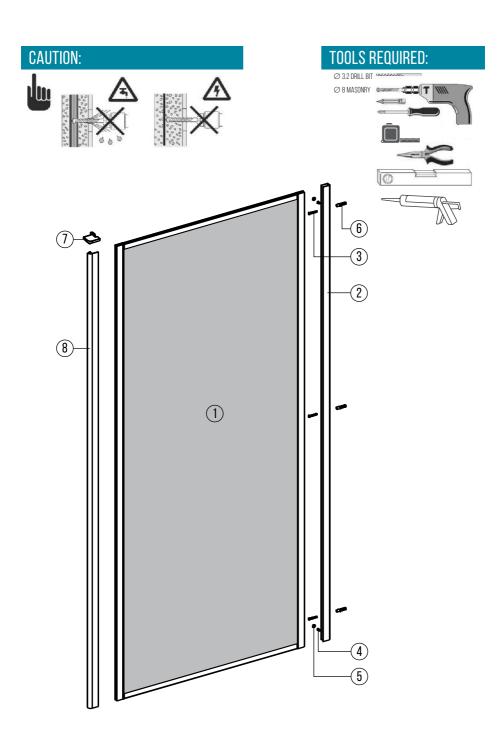


ITEM	DESCRIPTION	QTY.
1		1
2		1
3	{	4
4	∑00000 ⊕ ST4X10 OR 3.2X7MM	5
5		3
6	Ø8	4
7.1		1
7.2		1
8		1

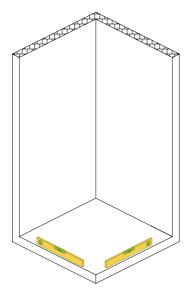



Check floor for level

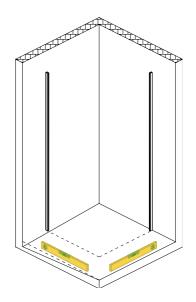



If uneven, fit wall channels level to the highest side

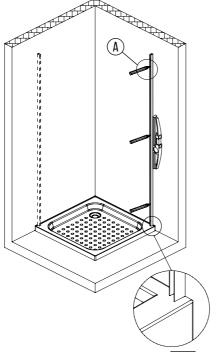


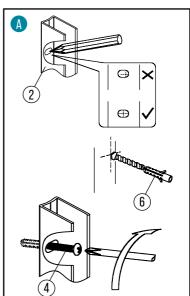


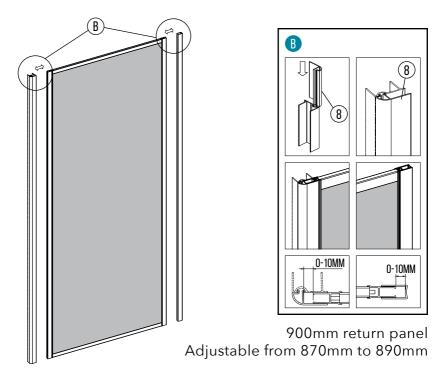


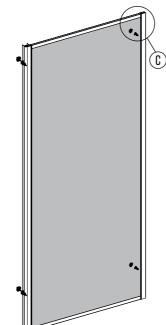

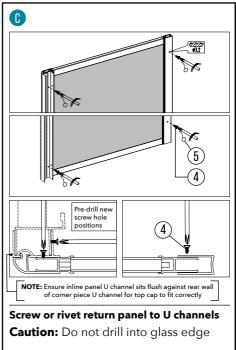

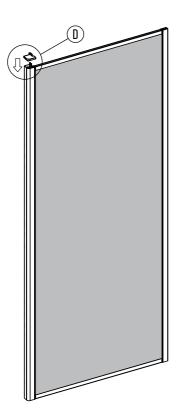

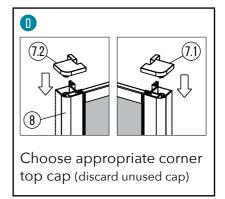

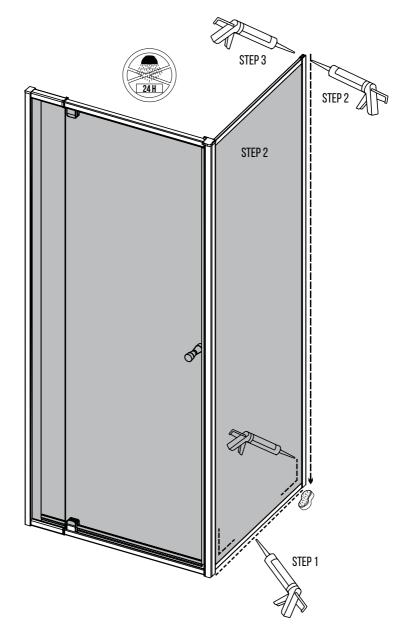

Ensure clean & dry surfaces before silicone application Avoid usage of solvents during application

Note: Do not apply a silicone seal to the inside bottom gap between bottom rail and floor tray