

alumaluxe

DECORATIVE SCREENING

1000mm wide x 1850mm high

CHARCOAL OR NATURAL WHITE COLOURS AVAILABLE

HEIGHT &
WIDTH
adjustable



WITH FRAMING SYSTEM SOLD SEPARATELY



ENCHANTED FOREST

Charcoal: ADS-ENC-C

Natural white: ADS-ENC-W

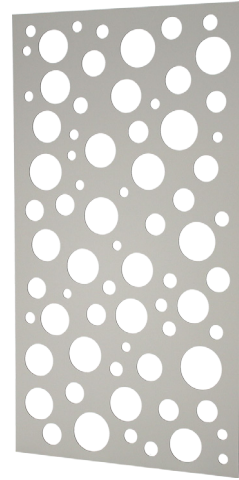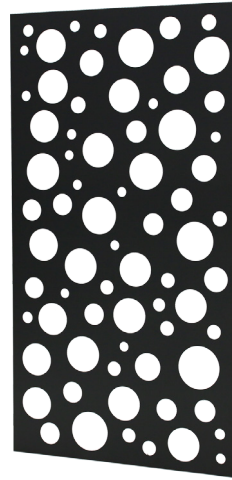

CIRCLES

Charcoal: ADS-CIR-C

Natural white: ADS-CIR-W



BAMBOO

Charcoal: ADS-BAM-C


Natural white: ADS-BAM-W



LEAVES

Charcoal: ADS-LEA-C

Natural white: ADS-LEA-W

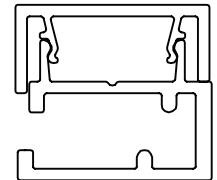

FRAMING KIT

- 2x 1900mm frames
- 2x 1050mm frames
- 2x 1900mm snap on covers
- 2x 1050mm snap on covers
- 4x frame caps
- 6x 15 x 15 x 100mm angle
- 30x screws

Charcoal: ADS-F-KIT-C

Natural white: ADS-F-KIT-W

FEATURES & BENEFITS

ALL THE BENEFITS OF CUSTOM MADE
WITHOUT THE COST OR DELAY



durable aluminium surface



rust & rot resistant



light weight & rigid polymer core



no painting required



optional framing system available



easy & quick installation

INSTALL GUIDE

TOOLS REQUIRED

- Tape measure
 - Electric jig saw*
 - Metal jig saw blade*
 - Masking tape*
 - Clamps*
 - Safety glasses
 - Pencil/marker
 - Drill
 - Screwdriver
- *Only required when adjusting width and height of decorative panel


HOW TO ADJUST HEIGHT AND WIDTH

1 Measure desired height and width of panel. Ensure panel is laying flat on suitable support (cutting table/trestles etc) and ensure cutting surface is padded and clean of debris.

2 Clamp panel where possible to cutting table/trestles then mask cutting line with masking tape to avoid direct contact with jig saw base while cutting. **Mark cutting line with pencil.**


ADJUST HEIGHT

Ensure panel is held securely in place with clamps on left and right sides

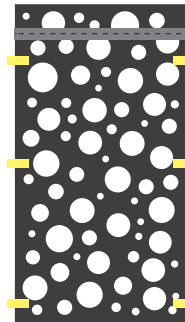

ADJUST WIDTH

Ensure panel is held securely in place with clamps on top and bottom sides

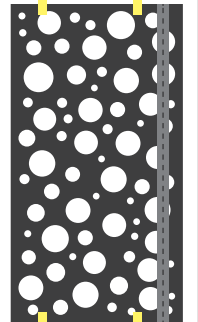

3 Use fine tooth aluminium/metal jig saw blade and **cut panel in a slow, continuous motion** keeping the jig saw flat at all times.
Eye protection must be worn throughout the cutting process.

4 File or sand back all cut edges at a 45° angle to remove sharpness or burring.


alumaluxe

DECORATIVE SCREENING

glass
outlet


INSTALL GUIDE

1 FULL PANEL FACE MOUNT INSTALLATION

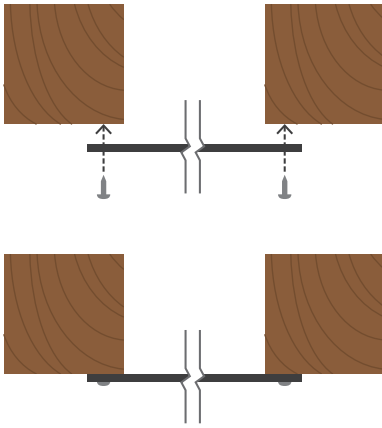


Must use at least 3 fixings on each side of the panel.

Select suitable fixing for substrate.

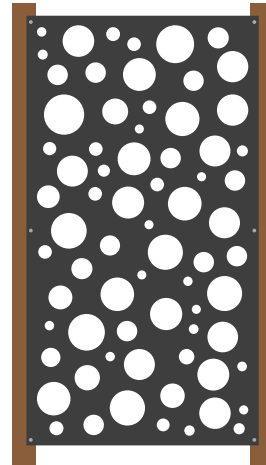


2 ADJUSTED PANEL FACE MOUNT INSTALLATION

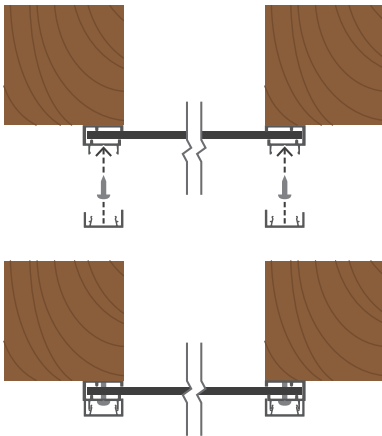


Must use optional framing system to affix panel to face of post/wall.

Affix outer frame to screening panel prior to installation to posts. (Framing system sold separately)

Select suitable fixing for substrate.

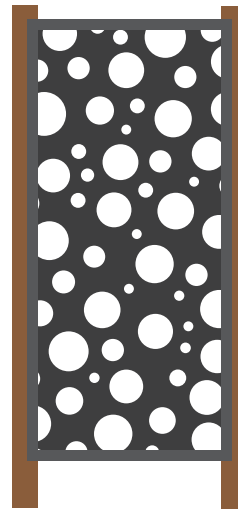


3 ADJUSTED PANEL RECESS FIT INSTALLATION

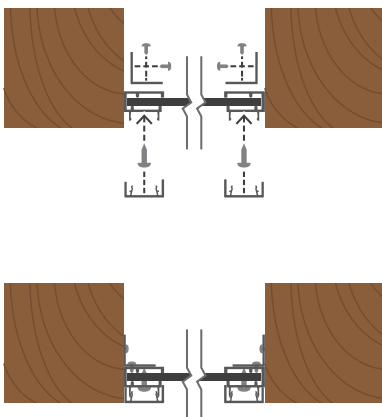

Must use optional framing system AND a 15x15mm angle to fix to recess.

Affix outer frame to screening panel prior to installation to posts/void. (Framing system sold separately)

Select suitable fixing for substrate.

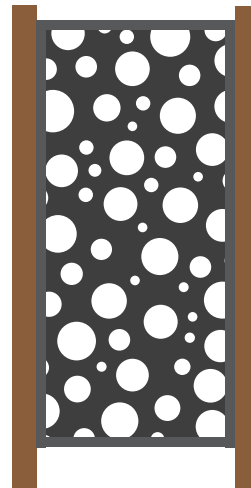

Use multiple pieces of angle to ensure screening panel is fixed securely to posts or wall

alumaluxe

FRAMING KIT

INSTALL GUIDE

TOOLS REQUIRED

- Tape measure
- Hacksaw
- Safety glasses
- Pencil/marker
- Drill
- Screwdriver

PACK INCLUDES

- 2x **1900mm frames**
- 2x **1050mm frames**
- 2x **1900mm snap on covers**
- 2x **1050mm snap on covers**
- 4x **frame caps**
- 6x **15 x 15 x 100mm angle**
- 30x **screws**

1 Establish required **overall height** and **overall width**

2 Cut Alumaluxe Decorative Panel: **Overall height minus 4mm**
Overall width minus 4mm


NOTE: Follow cutting procedure as directed on Alumaluxe instruction panel

3 • Cut the long **frames** to required overall height
• Cut the long **snap on covers** to required overall height
NOTE: DO NOT attach **snap on covers** yet

4 • Cut the short **frames** to required overall width minus 52mm
• Cut the short **snap on covers** to required overall width minus 52mm

NOTE: DO NOT attach **snap on covers** yet


*The short frames must be trimmed down 52mm to fit between the vertical side **frames**

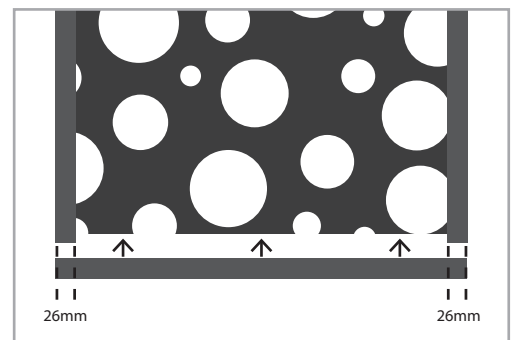

5 Place Alumaluxe Decorative Panel face up on a padded clean surface. Push outer **frames** on to all 4 sides of decorative panel


6 Fix frames to panel with self tapping screws provided and ensure **frame** is secure (fixing screws should be used at approximately 450mm centres. Additional screws can be used as required)

NOTE: DO NOT attach **snap on covers** yet

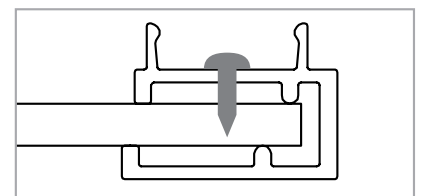

INSTALL GUIDE



- 7^A** For **face mount installation**, screw completed decorative screening unit to post/wall as required

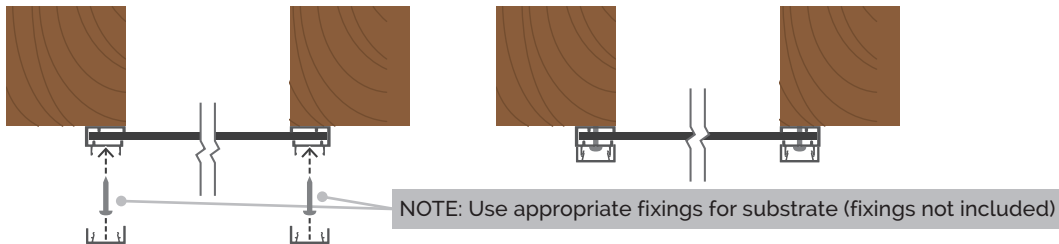


- 7^B** For **recess mount installation**, fix 6x **angles** to back of **frames** with self tapping screws provided prior to mounting to post/wall

Hold panel in place and fix to post/wall

NOTE: Use appropriate fixings for substrate (fixings not included)

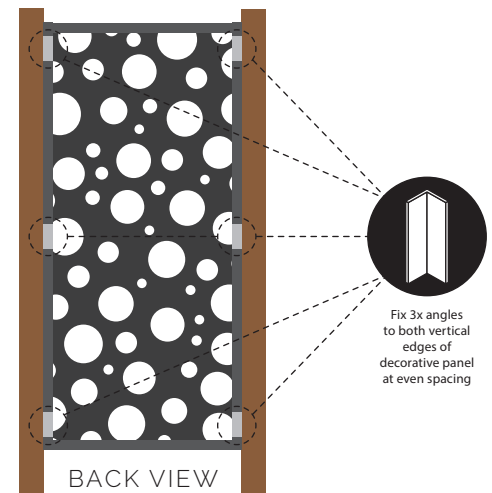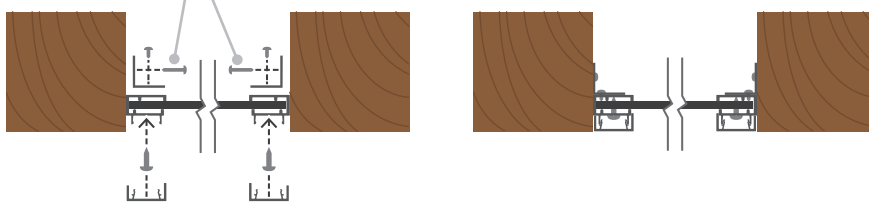

- 8** Fit **snap on covers** into place to hide fixings

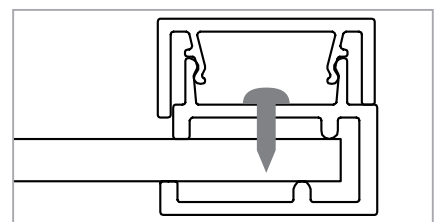

- 9** Fit **frame caps** and trim to suit **frames** or **angle** if desired

